



## **MODE SELECTION and BUTTON OPERATION ON NISSAN/INFINITI vehicles that are SAT/XM ready (US and Canada)**

The information below will show you how to select different mode (USB/AUX/IPOD) on the Nissan/Infiniti stereos. There can be different type of stereos:

### **1. -----Nissans/Infiniti that have PRESET A \* B \* C button-----**

.No voice prompts will be heard for these vehicles, but iPod/Auxiliary/USB will be shown on the display.

Go to Preset A then press Radio or SAT button until in satellite mode = GROM USB mode

Go to Preset B then press Radio or SAT button until in satellite mode = GROM IPOD mode

Go to Preset C then press Radio or SAT button until in satellite mode = GROM AUX mode

In USB or iPod mode the TUNE/FOLDER knob or button will control folder selection or playlist selection.

SEEK TRACK buttons control track selection. Presets 1-6 have no function.

For proper steering wheel control operation, it is necessary to play a song in USB mode and iPod mode, and then program all the presets (1-6) to the current song playing.  
Regular radio presets will be programmed to Preset C.

### **2. -----Infiniti vehicles that do not have PRESET A \* B \* C button (03-06 Infiniti G35)-----**

XM 1 = USB flash drive mode (USB stick)

XM 2 = iPod (if optional iPod cable IPD2 connected) or AUX mode. If using AUX mode please be sure the iPod is disconnected from the unit.

(^ TUNE FF REW v) button controls folder or playlist selection

(^ SEEK TRACK v) button controls track selection

The (DISP) button will control MP3 text from USB flash drives.

Presets 1-6 have no function.

**If your Nissan/Infiniti stereo is different then above mentioned stereos please contact us at <http://gromaudio.com/support.html> for the information on how to switch between the different modes on your particular stereo.**